Connector Views

65. Windshield Wiper/Washer Switch

– Natural
– Right side of steering column
– On dashboard wire harness B

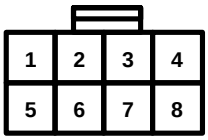

L4:

1 BLK/YEL (Washer motor control)
2 GRN (Intermittent wiper output)
3 BLU (To wiper motor LOW winding)
4 BLU/YEL (To wiper motor HI winding)
5 WHT (To intermittent wiper relay)
6 —
7 All except ’01-’02 Coupe: YEL/GRN (Fuse 7 – Driver’s)
’01-’02 Coupe: GRN/BLK (Fuse 12 – Driver’s)
8 BLK (G401)

L4:

1 BLK/YEL (Washer motor control)
2 GRN (Intermittent wiper output)
3 BLU (To wiper motor LOW winding)
4 BLU/YEL (To wiper motor HI winding)
5 WHT (To intermittent wiper relay)
6 —
7 All except ’01-’02 Coupe: YEL/GRN (Fuse 7 – Driver’s)
’01-’02 Coupe: GRN/BLK (Fuse 12 – Driver’s)
8 BLK (G401)

©2002 American Honda Motor Co., Inc.